






 


Frequently Asked Question

Q: How do I access the menu?

A: Unlock the key lock, stop the recording.

CONTROL BUTTONS in the RECORD MODE	
	▶ HDD USAGE: Show the usage of the hard drive.
	▶ Key lock: Push the button 5 times to lock/unlock the "STOP RECORDING" key. (While the "STOP" Key is locked, there will be a letter "L" showed on the left-down corner)
	▶ Stop: Stop the recording.
	▶ Auto Switching Channels: Enable / Disable the auto switching function. ▶ Quad Display: Monitor will be displayed as a quad display.
 Ch1	▶ Channel 1: Channel 1 will be displayed as full screen.
 Ch2	▶ Channel 2: Channel 2 will be displayed as full screen.
 Ch3	▶ Channel 3: Channel 3 will be displayed as full screen.
 Ch4	▶ Channel 4: Channel 4 will be displayed as full screen.